




Disassembling Power Mac G4 M5183 DVD-ROM Drive

Written By: Stephen Scruggs

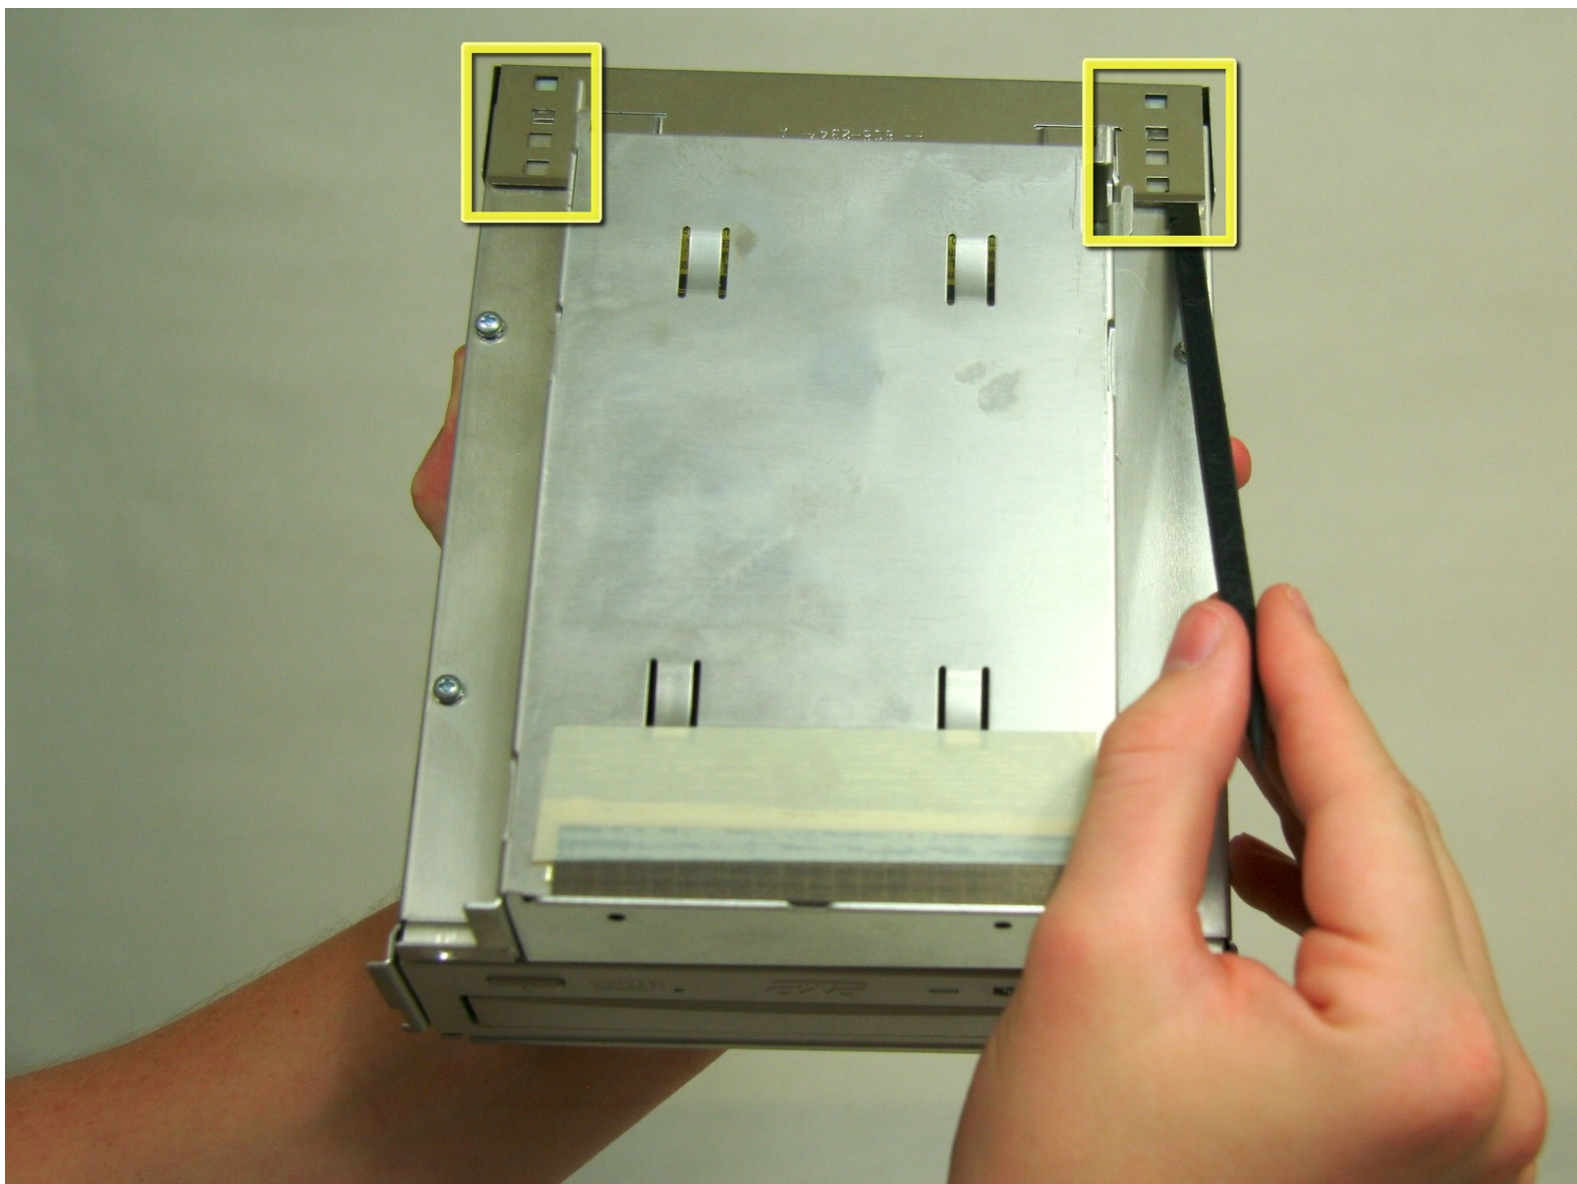

INTRODUCTION

This guide details the removal of the DVD-ROM from the disc drive tray.




TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Opening PowerMac G4 M5183 Case



- Pull on outer latch.
- Lower door until it is level with your work surface.

 Before working on the computer make sure it is not plugged into a power supply, then touch a metal object. This discharges static electricity, which could damage the computer.

Step 2 — DVD-ROM Drive



- Removing the faceplate.
 - On the inside of the case, find the two plastic tabs.
 - While depressing the tabs, remove the faceplate by pulling and rotating outward.

Step 3




- Remove the two screws on the front of the drive with the Phillips #1 screwdriver.

Step 4



- Pull the drive out to allow access to the power and ribbon cables. Do not fully remove.
- Remove both the power and ribbon cable.

Step 5 — DVD-ROM Drive

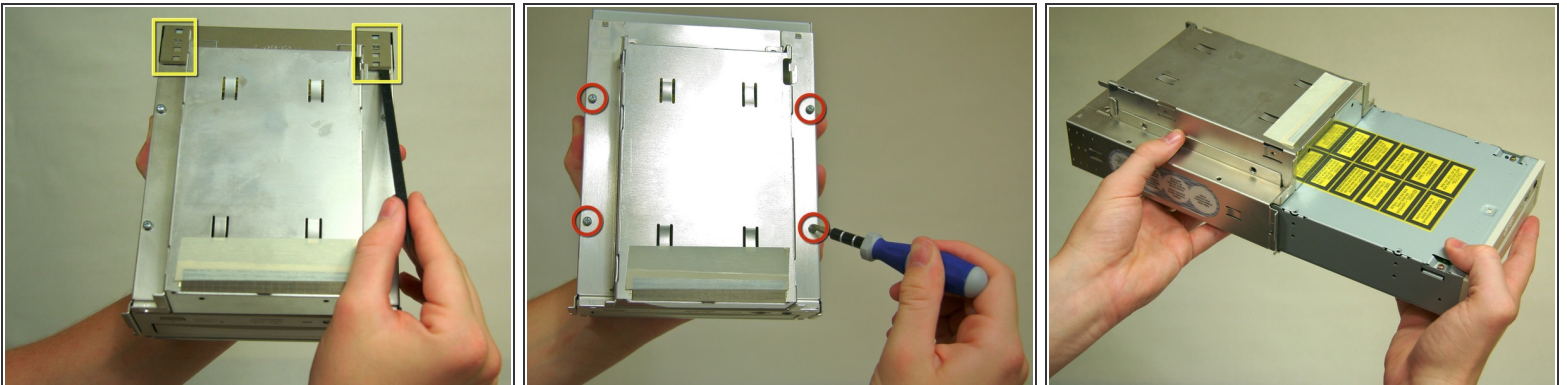

- Remove DVD drive from the drive bay.
 - Lift the two metal tabs on the back of the shielding and remove.
 - Remove the four screws on the bottom of the drive with the Phillips #1 screwdriver.
- Slide out DVD drive.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-11-20 03:22:05 PM.